 
 
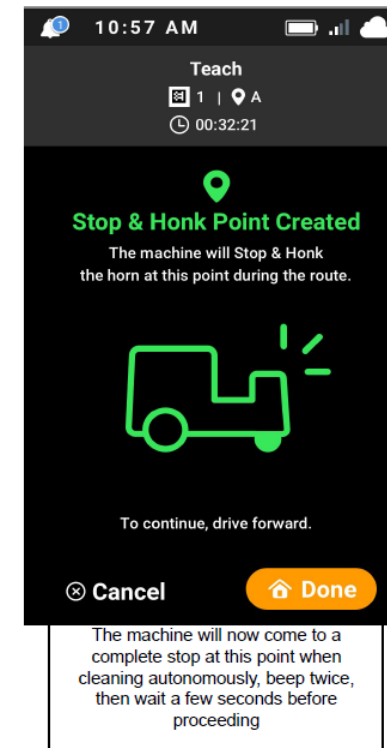 
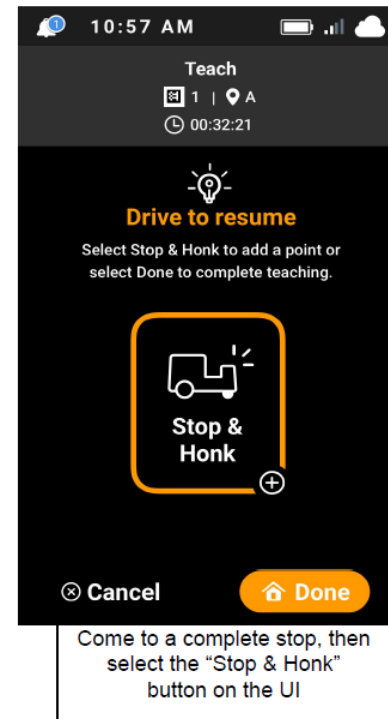 


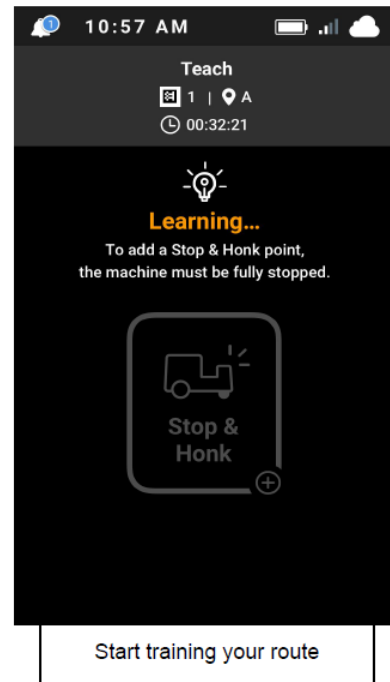

Software 3.3.0 Update

October 2021

Stop & Honk

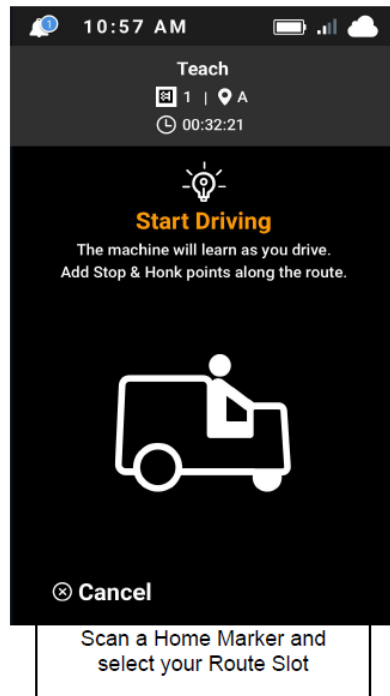

- There is no limit to the number of “Stop & Honk Points” that can be added to a route
- If an operator wants the machine to stop every time the machine exits an aisle when making multiple passes, they’ll need to add a “Stop & Honk Point” for each pass.

Additional Updates

- Enhancements
 - Improved performance on black floors specific to the T16AMR
- Added languages
 - Czech
 - Polish