KIT NO. 611006 Page 1 of 1





SWITCH REPLACEMENT KIT

TENNANT

NC

Models: 5680, 5700, 5700XP, 5300


INSTALLATION INSTRUCTIONS: (Installation Time: 15 min.)

TOOLS REQUIRED: 7/32" Wrench.

FOR SAFETY: When servicing machine, disconnect battery connections before working on machine.

ATTENTION: READ BEFORE INSTALLING NEW SWITCH.

The replacement switch may have a different terminal configuration than the switch being replaced. For proper switch installation, take note of the wires connected to the (NO) and (NC) terminals before disconnecting old switch, see switch styles below. Reconnect wires to the (NO) and (NC) terminals according to the style of switch supplied as shown below.

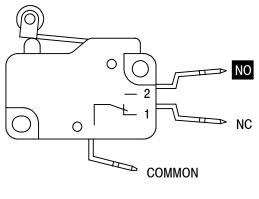



COMMON