

# 36V Replacement Battery Charger

Models: B10, SpeedGleam Rider



**ATTENTION:** The battery charger is pre-set to charge 435 Ah wet/lead acid batteries. If machine is equipped with sealed 390 Ah AGM maintenance free batteries the charger settings must be changed as described below. Battery damage will result if charger settings are not properly set.

## BATTERY CHARGER SETTINGS:

### Tools Required: None

To verify the charger setting, plug the charger power cord into an electrical outlet.

At start up, the charger will briefly display a sequence of codes. The last code will read one of the following battery types: "Acd" or "GEL".


Acd = Set for wet/lead acid batteries.

GEL = Set for sealed AGM/GEL maintenance free batteries.


Press the "S" button on the charger's display to review codes.

- Set the switch positions according to battery type below.

### Wet/lead-acid 435 Ah Battery

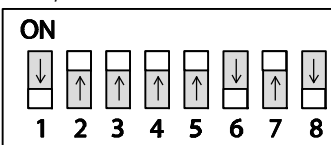

### AGM 390 Ah Battery

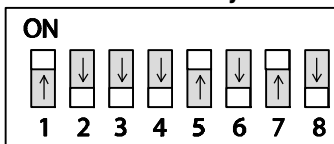

- Re-apply the display label.
- Plug the battery charger cord into an electrical receptacle and confirm that the charger is properly set for your battery type.
- Refer to the charger's owner manual for operating instructions.

**NOTE:** When replacing batteries, if switching to AGM or to wet/lead-acid batteries, make sure to change charger settings. The Battery Select Mode on the burnisher must also be changed (Refer to the Burnisher Operator Manual for details).

## To Change Battery Charger Settings:

- Unplug the battery charger power cord from electrical outlet.
- Carefully peel up the charger display label to access the switch settings.



## Battery Charger Fuse:

The battery charger is protected by a 15 Amp fuse. To replace a blown fuse, remove the fuse holder located at the front of the charger using a standard screwdriver.

Required Fuse: 15 Amp (part no. 1206662). Never substitute a higher Amp rated fuse than specified.

