



1610 READY SPACE®

Dual Technology Carpet Cleaner



Setup

See Backside



Restorative Cleaning

ReadySpace Cleaning

Before Use


1



ReadySpace Cleaning



2

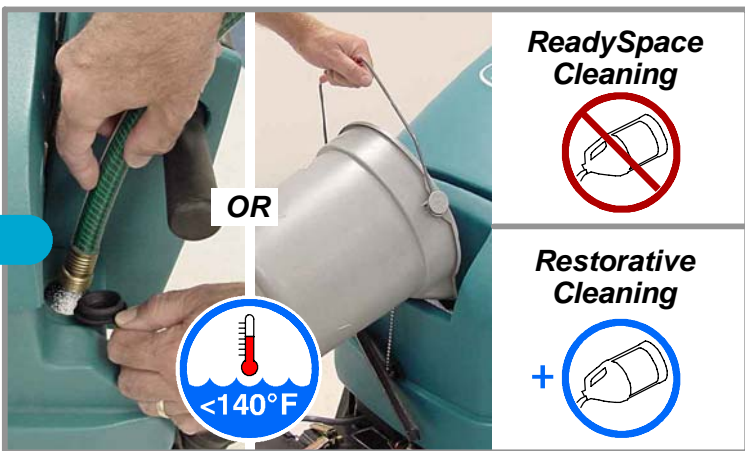


OR



ReadySpace Cleaning




Restorative Cleaning

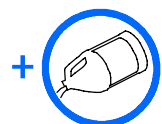

Operate

3

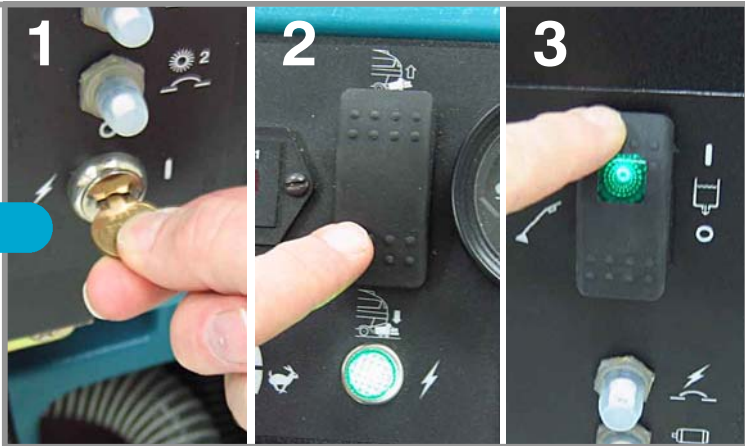

4



Rev

Fwd

ReadySpace: 100 ft per minute
Restorative: 50 ft per minute

5



ReadySpace Cleaning




Restorative Cleaning



After Use


6

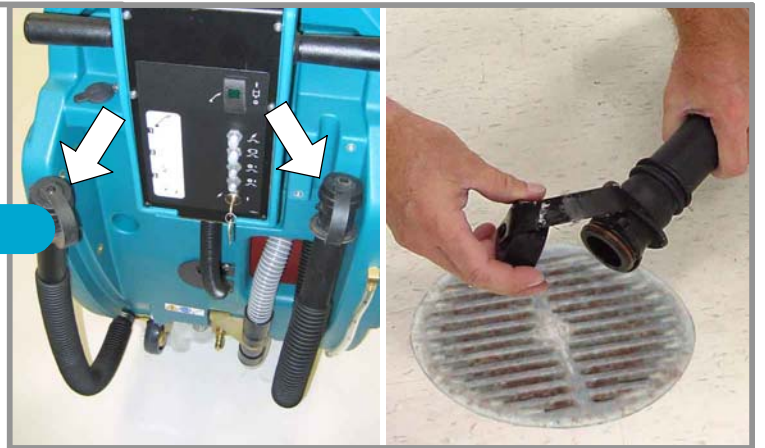

7



8

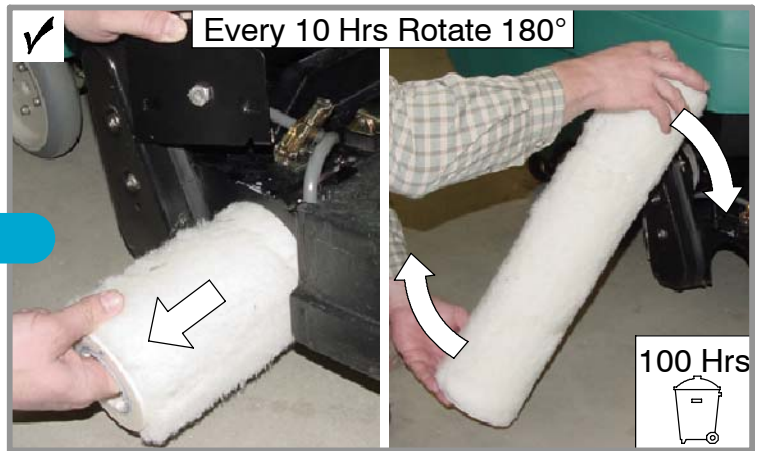

Every 10 Hrs Rotate 180°

100 Hrs

9




Every 10 Hrs Clean

Clean

Clean Front & Rear Vacuum Shoe

10

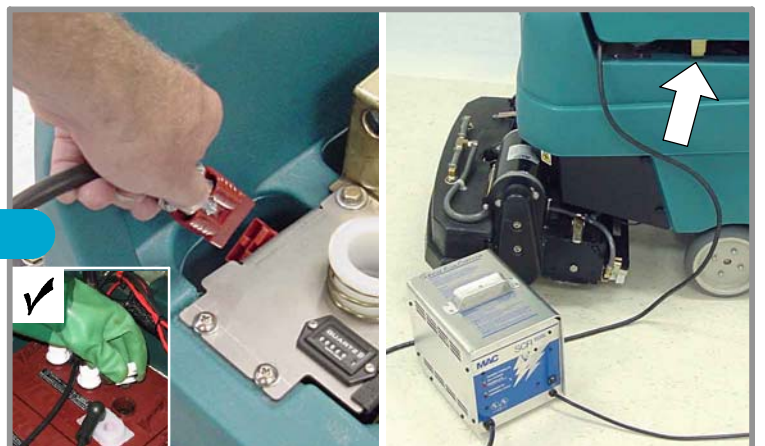



Setup ReadySpace Cleaning

FOR SAFETY: Remove key from machine before performing setup procedure.

1. Install the two ReadySpace Rollers.
2. Install rear ReadySpace Vacuum Shoe.
3. Connect the two Solution Flush Lines to Vacuum Shoe.
4. Connect Vacuum Tube to Vacuum Shoe.
5. Connect Vacuum Hose to Vacuum Tube.

Equipment Needed:

- 1) Two ReadySpace Rollers
- 2) Rear ReadySpace Vacuum Shoe
- 3) 6 mm Hex Head Tool (supplied with machine)

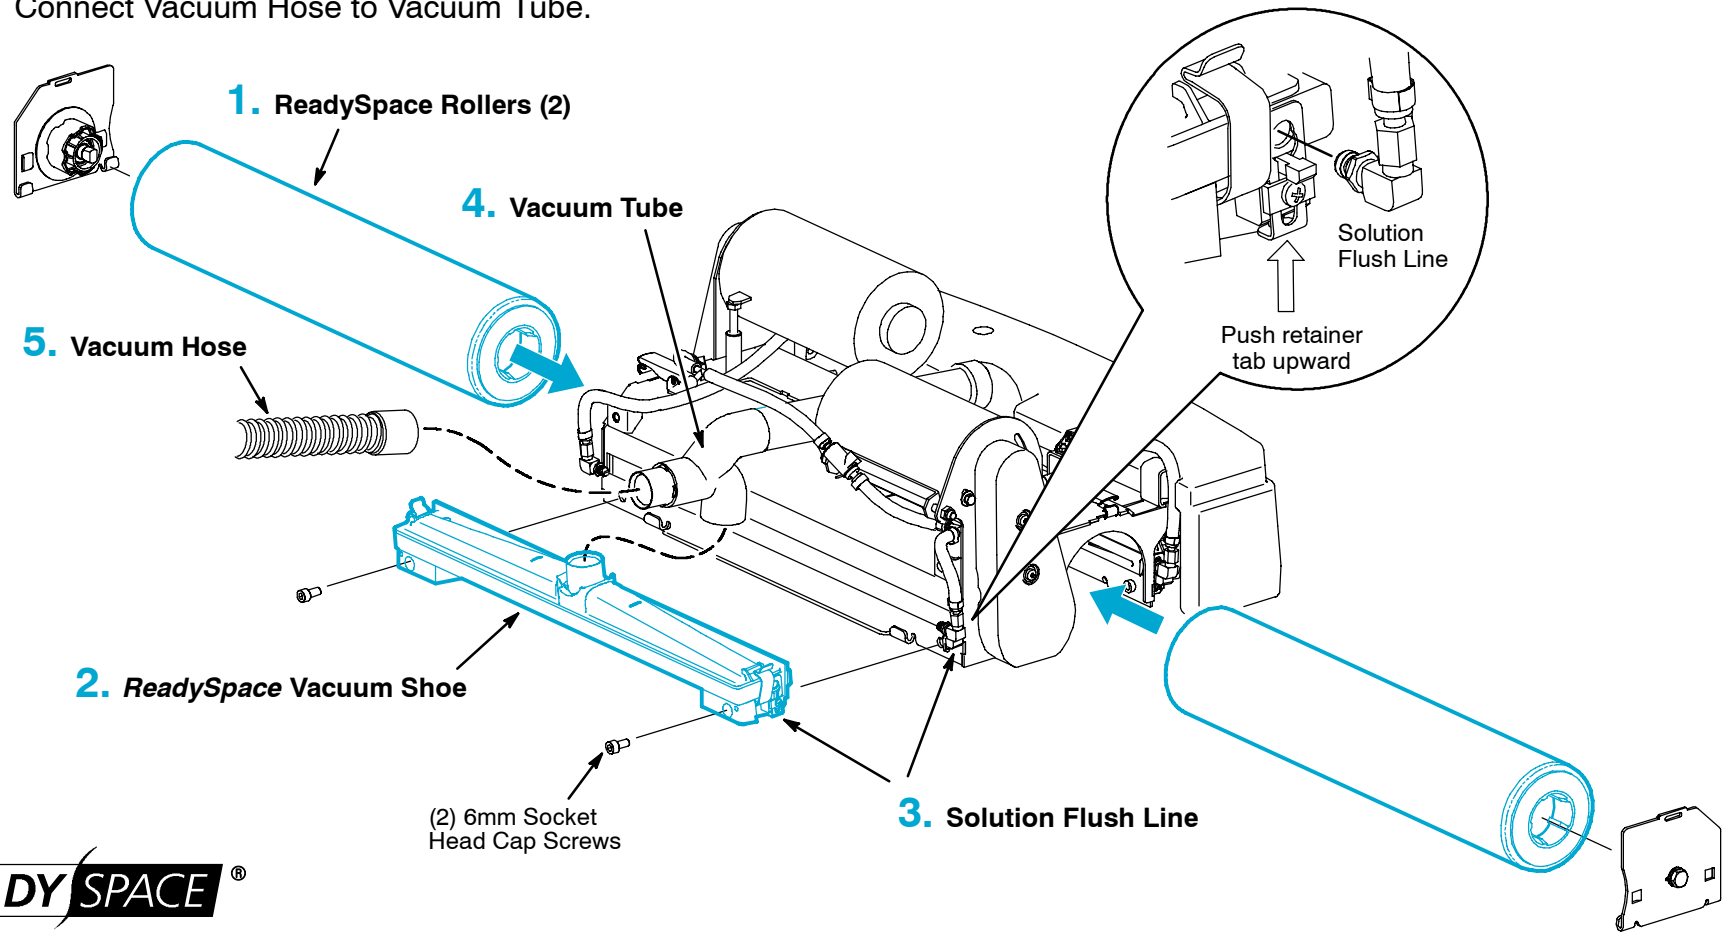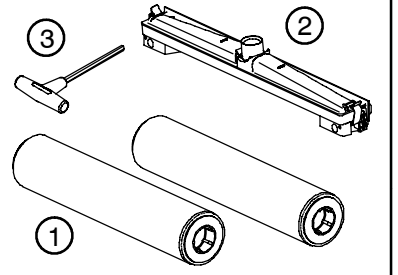

Setup Restorative Cleaning

FOR SAFETY: Remove key from machine before performing setup procedure.

1. Install the two Restorative Brushes.
2. Install Restorative Vacuum Shoe.
3. Connect Vacuum Hose to Vacuum Shoe.

NOTE: To prevent misplacing the ReadySpace Vacuum Tube and Solution Flush Lines Do Not remove from Scrub Head.

Equipment Needed:

- 1) Two Restorative Brushes
- 2) Restorative Vacuum Shoe
- 3) 6 mm Hex Head Tool (supplied with machine)

