

Insulation Kit

Models: T7 / Speed Scrub Rider



This kit is intended for machines manufactured before serial number 10319673.

The purpose of this kit is to reduce the pitch level coming from the vac motor.

INSTALLATION INSTRUCTIONS:

Installation Time: 1/2 Hour

TOOLS REQUIRED: 13mm wrench

FOR SAFETY: Before installing kit, stop machine on a level surface, remove key and disconnect the negative battery cable.

⚠ WARNING: Electrical Hazard. Disconnect Battery Cables Before Servicing Machine.

1. Remove the vac fan mounting plate from the recovery tank cover - 4 bolts (Figure 1).



Fig. 1

2. Remove the backing paper from the 1028514 foam insulation and install on the vac motor mount as shown (Figure 2).

NOTE: For best adhesion, clean the machine surface where the foam insulation is to be applied, allow the surface to dry, then apply the foam insulation. Using 120 grit sandpaper on the recovery tank cover before cleaning it will also improve adhesion.



Fig. 2

Kit Contents

Part No.	Description	Qty.
1028514	Insulation, Acstc, Vacfan	1
1028515	Insulation, Acstc, Hsng, Vacfan	1

3. Remove the backing paper from the 1028515 foam insulation and install on the underside of the recovery tank cover as shown (Figure 3).

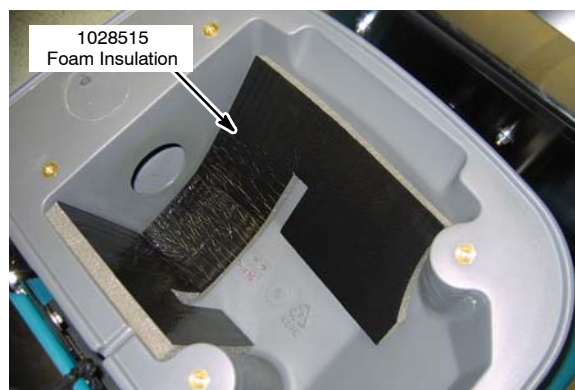


Fig. 3

4. Re-install the vac fan mounting plate back on to the recovery tank cover.