

## **Pad Motor Cable Hardware Kit**



Models: B10, SpeedGleam Rider

This kit is intended for machines manufactured before serial number 10683083. It includes the necessary hardware to prevent motor cables from loosening. Carefully follow the installation instructions as described below.


## **INSTALLATION INSTRUCTIONS:**

## Installation Time: 30 minutes


**Tools Required:** Torque wrench with a set point of 100 in-lbs (11.3 N-m), 1/2" socket and cable- tie cutters.


## FOR SAFETY: Before servicing machine, park on level surface and remove key.


1. Cut cable- tie as shown. Remove the existing hardware except for the inside nut from motor terminals. Torque the inside nut to 100 in- lbs (11.3 N - m).

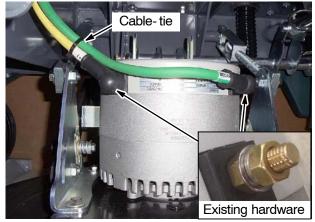

2. Using the hardware supplied with kit, connect the cables to motor as shown. Make sure to position the cables at the angles shown. Torque the nuts to 100 in-lbs (11.3 N-m).

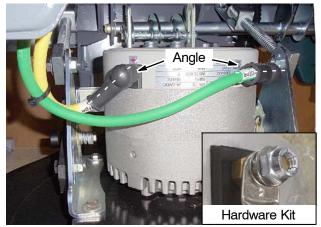

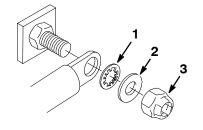

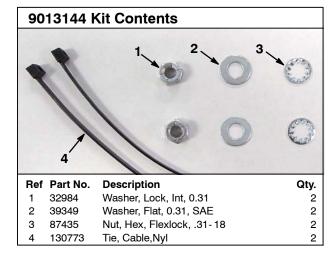

3. Secure cables with cable- ties as shown.

