



# **IRIS AM II Upgrade Kit**

NOBLES




Models: T7 / Speed Scrub Rider

This kit includes the necessary parts to add battery charger communication functionality to machines currently equipped with IRIS telemetry technology. See the *IMPORTANT INSTALLATION NOTICE* before installing kit.

### **INSTALLATION INSTRUCTIONS:**

Installation Time: 2 Hours Special Tools Required: None

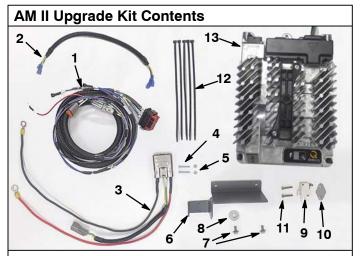

Ref	Part No.	Description	Qty.
1	1074466	Harness, Telem, AMII	1
2	1075494	Harness, extension	1
3	1075477	Connector, Harness, offboard charger	1
4	06923	Screw, Pan, Phl, m3x0.50x25, 4.8	2
5	579211	Nut, Hex, Lock, m3x0.50, nl,ss	2
6	1230028	Bracket, AM II Connector [T7]	1
7	1034731	Screw, Hex, m6x1.00x16, sems,ss	2
8	1017218	Washer, flat, 0.32B 1.99 .12, ss	1
9	611005	Switch, interlock	1
10	1013705	Plate, Thread, Switch, m3 nut	1
11	06922	Screw, Pan, Phl, m3x0.50x20,4.8	2
12	130773	Tie, Cable, Nyl, 11.0L, .14W, 3.0 Max. D	5
13	1230312	Charger, IC-650 Offboard	1

NOTE: Charger power cord not included, use cord from previous charger.

# IMPORTANT INSTALLATION NOTICE: Telemetry harness (Ref. 1) is not required for IRIS models manufactured after February 2017. The telemetry harness (Ref. 1) is factory installed. Carefully follow the kit installation instructions with this in mind. When installing the complete IRIS kit with the addition of the AMII upgrade kit, two telemetry harnesses (Ref. 1) will be provided. One from each kit. Only one harness is required for both kits.

### PREPARE MACHINE FOR KIT INSTALL:


- Park machine on level surface, turn off machine, remove key, and set parking brake if equipped.
- 2. Disconnect battery cable from machine.

WARNING: Always disconnect battery cables from machine before working on electrical components.






3. Remove seat, battery compartment shroud and the front two batteries from machine.

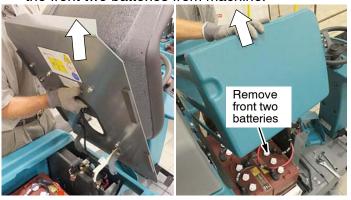

 Remove the charger connector interlock switch from machine and discard. Save backing plate for reuse.

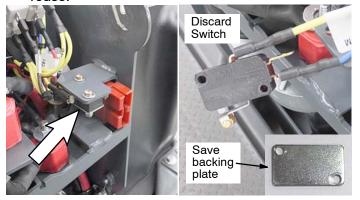


Remove the existing charger connector wire assembly from machine and discard.



KIT NO. 9015309 Page 2 of 4


6. Remove the existing telemetry harness from machine and discard. Do not remove any other parts associated with telemetry system.

**NOTE:** For IRIS models manufactured after February 2017, the removal of the existing telemetry harness is not required. The existing telemetry harness is AM II kit compatible. To confirm, the harness includes an open AM II charger connector as shown below.

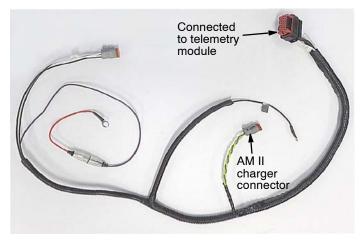

### AM II UPGRADE KIT INSTALLATION:


1. Connect the new AM II charger connector harness to the new charger connector bracket as shown.

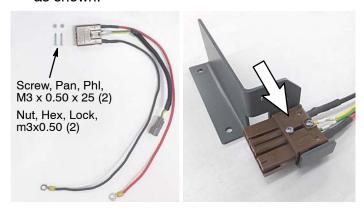


Connect the new interlock switch to bracket with hardware as shown.




3. Mount the bracket assembly to machine with hardware as shown.

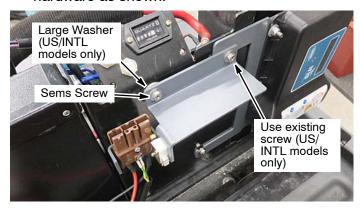

4. Route the red and black wires from the new charger connector through the protective sleeve as shown.

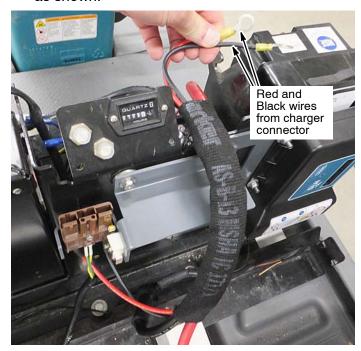


5. Connect the red cable to the (+) terminal on main contactor and the black cable to the negative stand-off.

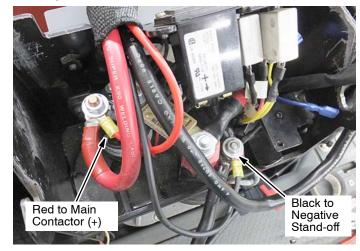


KIT NO. 9015309 Page 3 of 4


6. Connect the new extension wire harness to the new interlock switch as shown.

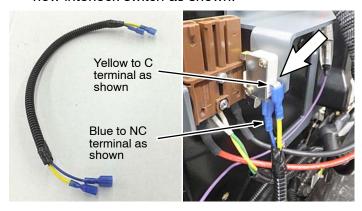


7. Connect the other end of extension wire harness to the blue and yellow wires that were originally connected to the old interlock switch.

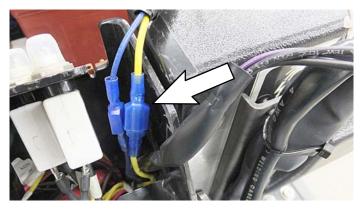


8. Secure the extension wire harness and the seat wire harness to panel with cable-tie as shown.

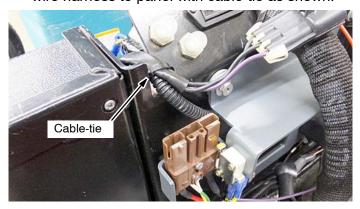

 IMPORTANT: To prevent possible damage to telemetry system during install, remove the in-line fuse from the new telemetry harness. Do not misplace fuse.

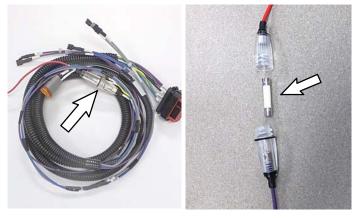


10. Connect the new telemetry harness to the following components. Secure harness with cable-ties.

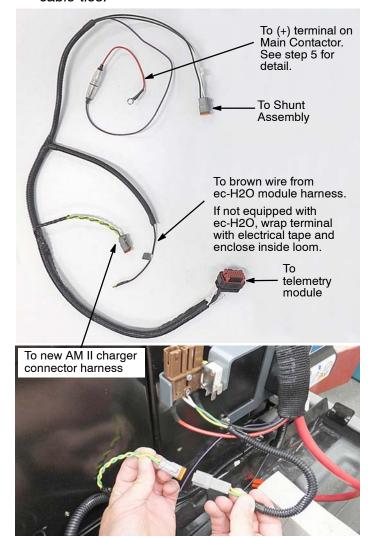

KIT NO. 9015309 Page 4 of 4

11. Reinstall the batteries, battery compartment shroud and seat. Reconnect battery cables.

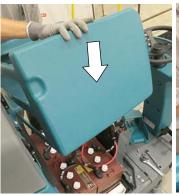




12. Reinstall fuse into telemetry harness.





### **TEST KIT FOR PROPER OPERATION:**

- Plug the new charger into the telemetry battery charge connector.
- Use existing AC power cord from old charger and plug new charger into power outlet. Wait up to 30 seconds for charger to start. A yellow lightning bolt will illuminate on the charger to confirm the batteries are in the charge cycle.

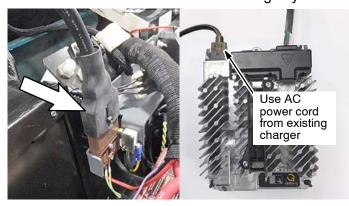

3. Turn key on to confirm the charger interlock switch disables the machine during the charge cycle. An audio alarm (horn) will beep nine times repeatedly indicating that the charger is plugged into machine which also disables the machine. If the alarm fails to beep, check the interlock switch for proper installation. Check wire connections and roller alignment. Repeat step.

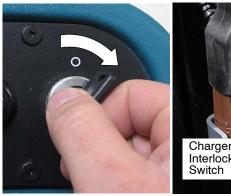

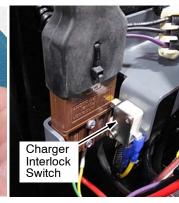

 After testing is confirmed, contact Tennant Technical service department as instructed below.

## AM II UPGRADE KIT CHARGER PROFILE SETTING:

**IMPORTANT:** To properly report battery charging data via IRIS, contact Tennant technical service department to set the charging profile to your specific battery type. Please have battery type information available when contacting service.

### IRIS TELEMETRY KIT ACTIVATION:

If the complete IRIS telemetry system was installed with the addition of the AM II upgrade kit, call the Tennant technical service department to activate the IRIS module and to set the charging profile. The IRIS telemetry system must be activated to complete the install. Please have machine serial number and IRIS module SIM number available when calling for activation.

NOTE: When batteries reach end of life and must be replaced, Tennant highly recommends that the same battery type be used to continue to maximize the machine performance. In the event a battery with a different amp hour (AH), type (flooded, AGM, Gel), or manufacturer is selected for replacement please contact Tennant technical support department for assistance in determining the feasibility of the replacement batteries and selecting the correct charging profile.